








## Battery Powered IllumaGrip® Installation Instructions

(Part #'s 86810-XX-60-16)

PARTS INCLUDED:			TOOLS/MATERIALS NEEDED:	
				
IllumaGrip Handle	AA Batteries x 4	#10 x 2" Pan Head Screws x 4	#2 Phillips Screw Driver	Electric Drill w/ 1/8" Drill Bit
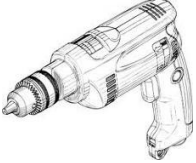
## Battery Powered IllumaGrip® Safety Instructions

**IMPORTANT SAFETY INSTRUCTIONS. READ CAREFULLY FOR YOUR PROTECTION AND SAVE ALL INSTRUCTIONS.**

\*To avoid a hazard to children, account for all parts and destroy all packing materials.

**SERVICE**

Tampering with any seals or electronics will void the warranty, the only user serviceable parts are the batteries. Contact elio for service parts at 616.396.1355.

**General Installation Notes**

\*ITC recommends installing the IllumaGrip directly into traditional wood building studs, or contractor supplied blocking in accordance with ASTM F446 and 28CFR36.

\*Mounting directly into drywall is not recommended and may not meet ADA standards. If installing into drywall it is the installers responsibility to determine the best mounting method and fasteners.

\*Any installation other than what is recommended will be the responsibility of the installer.

\*Approved cleaning materials include: soap and water, bleach/water mix and ammonia/water mix.

\*It is the installers' responsibility to verify that the location of the installed IllumaGrip is compliant with all ADA standards and regulations ([www.ada.gov](http://www.ada.gov)).

\*Stainless steel screws are recommended for installation in a wet location.

## Battery Powered IllumaGrip® Warranty Information

**GENERAL PRODUCT LIMITED WARRANTY**

ITC Incorporated under its corporate name or the elio trade name (collectively hereafter referred to as the "Company") warrants, to the original purchaser, that the product will be free of defects in materials and/or workmanship for the period of time set forth herein. This warranty period will begin from the original date of purchase of the product, it does not include batteries. Except as set forth below, this general product limited warranty will extend for three years. All assist handles will have a three year warranty period, provided that crazing caused by chemical attack from a contaminant other than those listed is not covered by any warranty.

**MAXIMUM LIABILITY** The Company's liability to repair or replace a damaged item shall be limited to the original purchaser of the item at the original invoice price of the damaged unit. Labor and freight will not be included

**INSPECTION** The Company reserves the right to review the damaged product and the site where the damage occurred. The Company may require the purchaser to ship the item to the Company for inspection. The damaged item must remain available for inspection until the claim is finalized. In the event the Company requests to inspect the product, it agrees to dispatch its findings pertaining to the alleged defective product within 45 days of receiving the product. Whenever claims are settled, the Company reserves the right to be subrogated under any existing insurance policies the purchaser may have.

**EVENTS THAT VOID WARRANTY** All above warranties are null and void if any one or more of the following events occurs: (a) the item is not provided to ITC for inspection upon the Company's request; (b) the Company determines that the item has been improperly installed, altered in any way or tampered with; (c) the Company determines that the item was not used under normal operating conditions or in accordance with labels or instructions for the item including, (d) the Company determines the product was not properly maintained, and/or; e) the Company determines that an unauthorized repair, modification, disassembly, or other changes to the product created the alleged defect. In addition to the foregoing, this Warranty does not protect against damage to the product when the Company determines, in its sole discretion, that the damage resulted from acts of God such as lightning, flood, earthquake, war, vandalism, theft, normal-use wear and tear, terrorism, strikes, and labor stoppages. This warranty specifically excludes damage, deterioration or discoloration caused by sunlight or similar ultraviolet rays and/or wavelengths and/or dents, holes or scratches to the unit caused by stones, rocks, debris or abrasive cleaner and cleaning pads.


**EXCLUSIVE REMEDY** This Warranty contains the sole warranty of the Company with respect to the product and is given in lieu of all other warranties. There are no other warranties, express or implied, including implied warranties of merchantability or fitness for a particular purpose and any implied warranties that cannot be waived and/or excluded are hereby limited in duration to the terms of this Warranty.

**LIMITATION ON LIABILITY** In no event shall the Company or any affiliate of the Company be liable for direct, indirect, special, incidental, consequential, or multiple damages arising out of the use of the item, regardless of the legal theory on which such claim is based, even if the Company has been advised of the possibility of such damage. Consequential damages shall include, but are not limited to loss of profits, loss of savings or revenue or bodily injury of any kind.


1 Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not be applicable.

## Battery Powered IllumaGrip® Installation Instructions

1. First remove the end caps by pressing down on the tabs while pulling the end cap off.

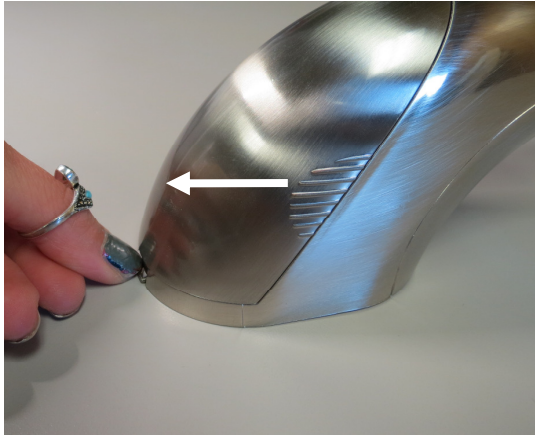

2. Determine the mounting location for the IllumaGrip and mark your holes. **Note:** The handle can either be installed in a horizontal or vertical position. If installing in a horizontal position use the two outside holes; holes are located on 16" center. For vertical installation use the center two holes and ensure that the holes in both end caps line up and are level.

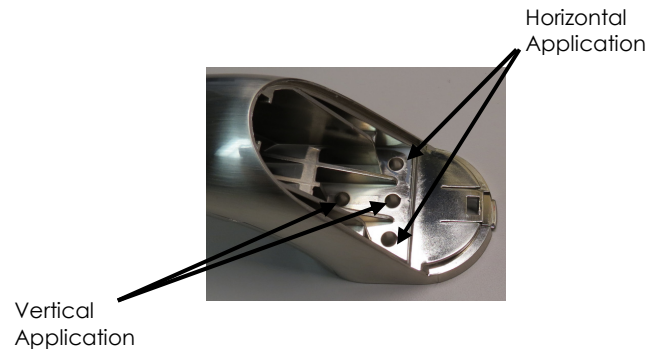

3. Pre-drill holes; then using #10 screws, attach handle to wall. When mounted vertically, position sensor at bottom.



4. Insert batteries into the battery holder making sure the positive/negative polarity on the batteries lines up correctly. Insert battery holder into handle as shown. Re-install end caps.

